

## 8. 배전반용 수신지시계 (Panel & Switch-board Meter)



TYPE : WY-R □ □ M



TYPE : WY-S □ □ M



TYPE : WY-SH96 □ □



TYPE : WY-W □ □ M

### ● Specifications

- DC Ampere meter or AC Ampere meter

Type	Size(mm)	Input	Operating Principle	Class (%)	Burden (VA)	Weight(g)	Dimension	
WY-R05A □ M	50×50	DC current or AC current (by Order)		±2,5	1.0	110	Refer to Page 220	
WY-R06A □ M	60×60					120		
WY-R08A □ M	80×80		130					
WY-R10A □ M	100×80		170					
WY-S47A □ M	47×47			±1,5		100		
WY-S72A □ M	72×72					110		
WY-S96A □ M	96×96		200					
WY-SH96A □ M	96×96		200					
WY-W08A □ M	80×80		±1,0 ±1,5			270		Refer to Page 221
WY-W11A □ M	110×110					470		

- DC Volt meter or AC Volt meter

Type	Size(mm)	Input	Operating Principle	Class (%)	Burden (VA)	Weight(g)	Dimension	
WY-R05V □ M	50×50	DC voltage or AC voltage (by Order)		±2,5	0.5	110	Refer to Page 220	
WY-R06V □ M	60×60					120		
WY-R08V □ M	80×80		130					
WY-R10V □ M	100×80		170					
WY-S47V □ M	47×47			±1,5		100		
WY-S72V □ M	72×72					110		
WY-S96V □ M	96×96		200					
WY-SH96V □ M	96×96		200					
WY-W08V □ M	80×80		±1,0 ±1,5			270		Refer to Page 221
WY-W11V □ M	110×110					470		

### ● Description

- 본 수신지시계는 공업량 또는 물리적인 량을 변환기 (Transmitter), 열전대 등을 통하여 계기 고유의 전기적인 량(계기 입력 전기량)으로 변환하여 그 물리적인 량 (rpm, spm, %, m/min, 기타)을 표시하기 위한 계측기입니다.
- This receiving indicating meter is measuring instrument for electrical value of V,A,RPM etc, change to physical-biographical amount by transducer and thermocouple etc, sensors,

## ● Dimension

### · WY-R Type Dimension

(Unit = mm)

Front view									
Rear view									
	Type	W	H	D	A	B	C	E	Ø
	WY-R08	80	80	36	15	34	30	64	65
	WY-R10	100	80	36	15	36	28	80	65

### · WY-R Type Dimension


Front view									
Rear view									
	Type	W	H	D	A	B	C	E	Ø
	WY-R05	51	51	35	14	18	18	36	44
	WY-R06	60	60	35	14	24	24	48	54

### · WY-S Type Dimension

(Unit = mm)


Front view									
Rear view									
	Type	W	H	D	A	B	C	X	Y
	WY-S47	48	48	44	5	44	12	44,5	44,5
	WY-S72	72	72	67	5	44	22	68	68
	WY-S96, SH96	96	96	91	5	44	22	92	92

### · Mounting Introduction

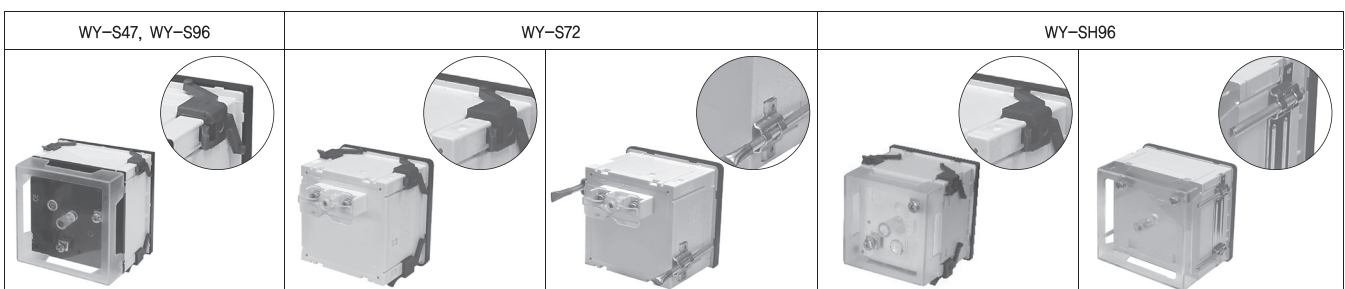


## ● Dimension


### • WY-W08 Type Dimension

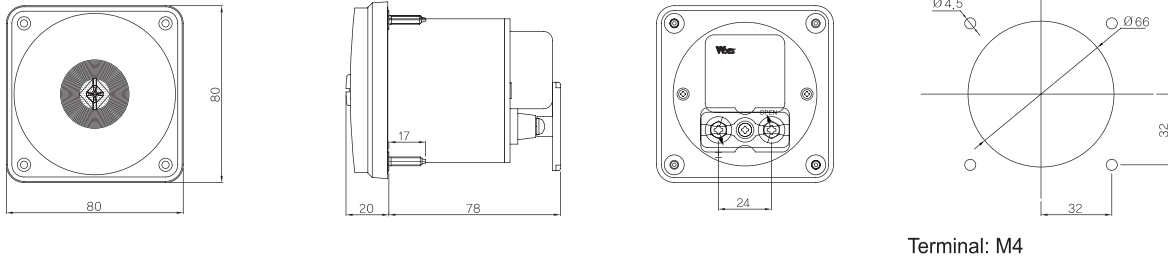


### • WY-W11 A, V Type Dimension

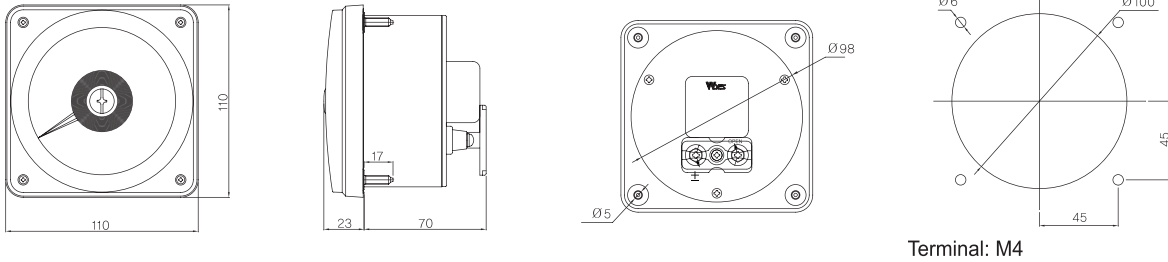

### • WY-W11 KW, var, PF Type Dimension

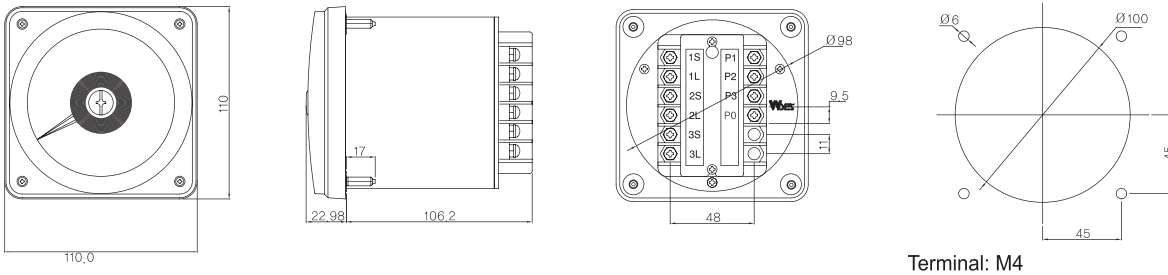

### • WY-SH96 KW, var PF Dimension

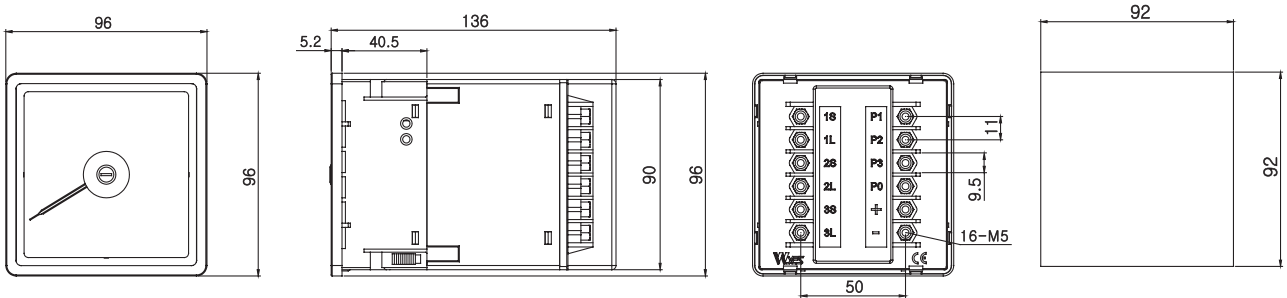


## ● 외부 변환기 사용

R, S, W08 타입의 Watt, var, Hz PF 계측기는 외부에 우측과 같은 변환기 (T/D) 를 사용합니다.

## ● External Transducers (For meter)

The Transducer for meter is used with the Watt, var and PF meter, etc., of the R type and S type or W08 type which it is external transducer.

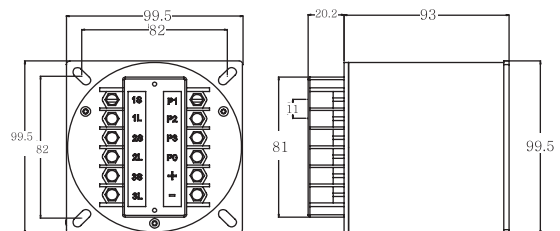

HV / CT  
고압변류기

HV / VT · MOF  
고압변압기

LV / CT  
저압변류기

LV / VT  
저압변압기

RELA Y  
보호계전기

ELD  
누전경보기

GFR  
지락계전기

ZCT  
영량변류기

METER  
지시전기계기

SPD  
서지보호기

SHUNT  
설펀트